



moving forward ▶



Customer Experience Center
1-800-331-4331



2008
Quick Reference Guide

Have a question about the main features of your new Toyota? Find the answers quickly and easily in this Quick Reference Guide, which includes highlights from the *Owner's Manual*. For more detailed information, and helpful interactive demonstrations and tips, visit www.ToyotaGuide.com. This user-friendly website makes learning all about your new vehicle fun and easy.



www.ToyotaGuide.com

This *iGuide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations. Important **Cautions**, to help you avoid injuries, and **Notices**, to help you avoid equipment damage or malfunction, can also be found in the *Owner's Manual*.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6

FEATURES/OPERATIONS

Accessory meter	13
Air Conditioning/Heating	16
Audio	14-15
Auto LSD (Limited Slip Differential)	18
Automatic Transmission	8
Bottle holders-Rear seat	19
Clock	16
Cruise control	17
Cup holders	18
Door-Back	13
Four-wheel drive	9
Intuitive parking assist	17
Light control-Instrument panel	17
Lights¹ & turn signals	12
Manual Transmission	8
Parking brake	10
Power outlet-12V DC	19
Power outlet-115V AC	19
Seat adjustments-Front	10
Seats-Folding rear seats	11
Seats-Head restraints	10
Seats-Removing rear seats	11
Tilt steering wheel	8
Windows	13
Windshield wipers & washers	12

SAFETY AND

EMERGENCY FEATURES



Door locks	20
Seat belts	20
Seat belts-Shoulder belt anchor	20
Spare tire & tools	21
Tire Pressure Warning System	21

¹ Visit your Toyota dealer for information on this and other customizable options.

OVERVIEW

Instrument panel

Steering wheel controls (if equipped)

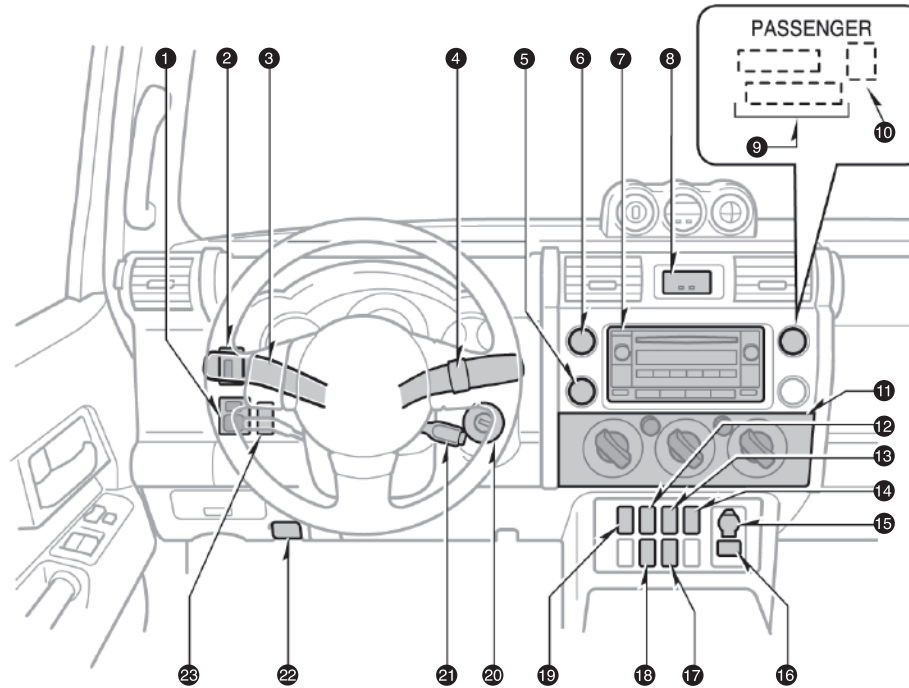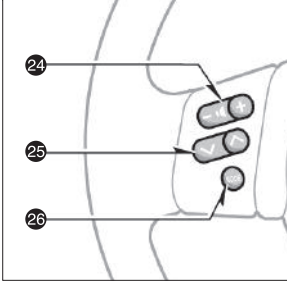


- ❶ Power rearview mirror controls*
- ❷ Instrument panel light control
- ❸ Headlight and turn signal control
- ❹ Wiper and washer controls
- ❺ Back window defogger button
- ❻ Emergency flasher button
- ❼ Audio system
- ❽ Clock
- ❾ Front passenger occupant classification indicator
- ❿ Front passenger seat belt reminder light
- ⓫ Air Conditioning controls
- ⓬ Rear differential lock button*
- ⓭ Active traction control switch*
- ⓮ Sub woofer ON-OFF button*
- ⓯ Power outlet
- ⓰ AUX audio jack

- ⓱ Intuitive parking assist switch*
- ⓲ Power outlet main switch
- ⓳ "AUTO LSD" button*
- ⓴ Ignition
- ⓵ Cruise control*
- ⓶ Hood release
- ⓷ Clutch start cancel switch*
- ⓸ Volume control switch (for audio)*
- ⓹ "V ▲" button (for audio)*
- ⓺ "MODE" button (for audio)*

* If equipped

Instrument cluster

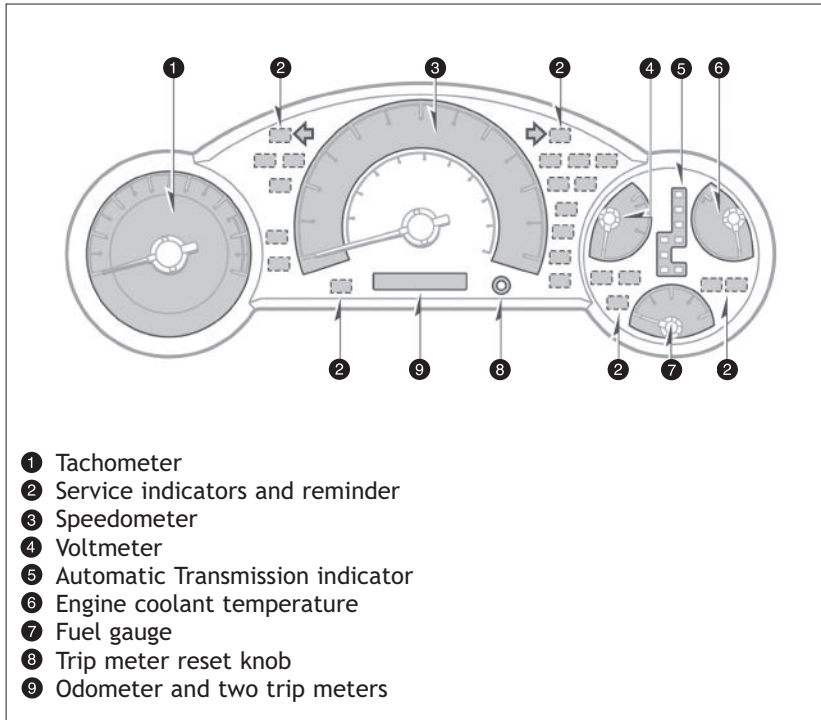

Indicator symbols

- Brake system warning¹
- Driver/Front passenger seat belt reminder¹
(alarm will sound if speed is over 12 mph)
- Battery warning¹
- Low engine oil pressure warning¹
- Malfunction/Check Engine indicator¹
- Engine oil replacement reminder¹
- Vehicle Stability Control warning¹
 - “AUTO LSD” warning¹
 - Traction Control warning¹
 - Active Traction Control warning¹

- Low fuel level warning¹
- Open door warning¹
- Airbag SRS warning¹
- Automatic Transmission fluid temperature warning¹
- Unengaged “Park” warning¹
- Low Tire Pressure Warning¹
- Engine immobilizer system indicator
- Front passenger occupant classification indicator
- Headlight high beam indicator
- Turn signal indicator
- Automatic Transmission indicator
- Rear differential lock indicator²
- Center differential lock indicator³
- Vehicle Stability Control “OFF” indicator
- Four-wheel drive indicator³
- Slip indicator
- “AUTO LSD” indicator
- Active Traction Control System indicator
- Cruise Control indicator⁴
- Anti-lock Brake System warning¹

¹ For details, refer to “If a warning light turns on or a warning buzzer sounds” Section 5-2, 2008 Owner’s Manual.


² For details, see “Rear differential lock system,” Section 2-4, 2008 Owner’s Manual.

³ If this light flashes, refer to “Four-wheel drive system,” Section 2-4, 2008 Owner’s Manual.

⁴ If this light flashes, refer to “Cruise control,” Section 2-4, 2008 Owner’s Manual.


Fuel tank door release and cap

Pull

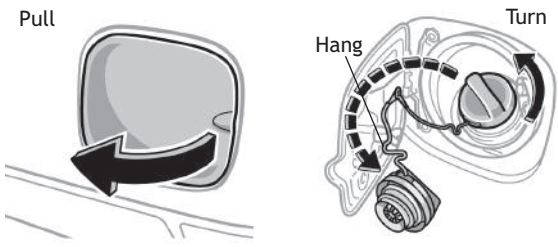


Hang

Turn


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Hood release

Pull

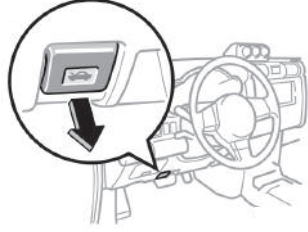

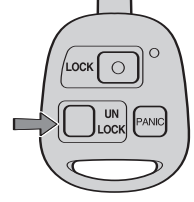



Pull up latch and raise hood

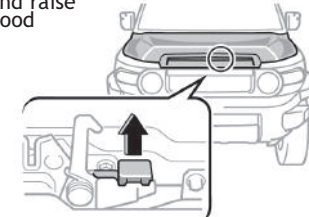



Keyless entry (if equipped)

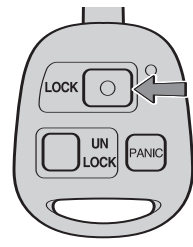Beep sound can be switched “ON” or “OFF” by customer. Refer to the *Owner’s Manual* for more details.


Locking operation	Unlocking operation
 <p>Push </p>	 <p>Push ONCE: Driver door TWICE: All doors </p> <p>NOTE: After unlocking, if a door is not opened within 60 seconds, all doors will relock for safety.</p>

Panic button



Push and hold 

Engine maintenance

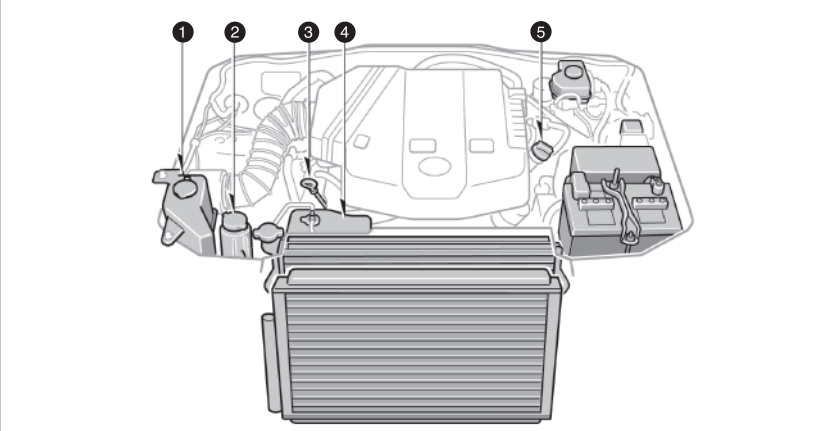


- ① Windshield and back window washer fluid tank
- ② Power steering fluid reservoir
- ③ Engine oil level dipstick
- ④ Engine coolant reservoir
- ⑤ Engine oil filler cap

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

FEATURES/OPERATIONS

Automatic Transmission

- P** Park¹
- R** Reverse
- N** Neutral
- D** Drive
- 4** Fourth gear
- 3** Third gear
- 2** Second gear
- L** First gear

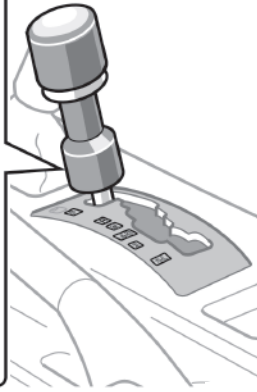


¹ The key must be in the “ON” position and the brake pedal depressed to shift from “Park.”

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

Manual Transmission

For safety, the engine will not start unless the clutch pedal is FULLY depressed. This function can be cancelled by pushing the “Clutch start cancel switch.”

Tilt steering wheel

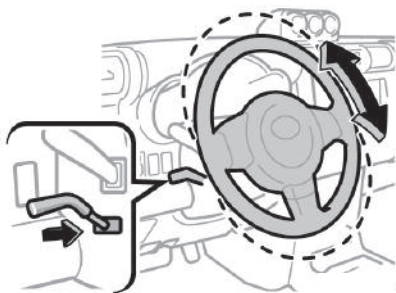

Hold the steering wheel, pull the lock release lever, tilt to the desired angle and release the lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Four-wheel drive (if equipped)


Part-time four-wheel drive models



- H2** High speed (2WD)
- H4** High speed (4WD)
Shift to “H4” with speed below 50 mph.
- L4** Low speed (4WD)
Stop vehicle, shift to “N” position, then move the lever to “L4.”

NOTE: For best fuel economy and performance under normal driving conditions, shift vehicle into “H2” position.

Full-time four-wheel drive models

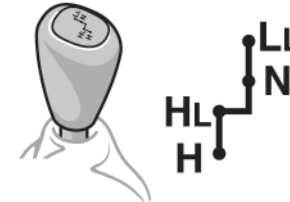

- H** High speed
- HL** High speed
Center differential locked. Depress the clutch pedal to shift from “LL.”
- LL** Low speed
Center differential locked. Depress the clutch pedal to shift from “HL” when vehicle is stopped or when speed is below 5 mph.

NOTE: For best fuel economy and performance under normal driving conditions, shift vehicle into “H” position.


Rear differential lock button



- Before using the rear differential lock button:
- Shift the lever into “L4” (part-time 4WD models)
 - Shift the lever into “LL” (full-time 4WD models)

Rear differential lock/unlock

Parking brake

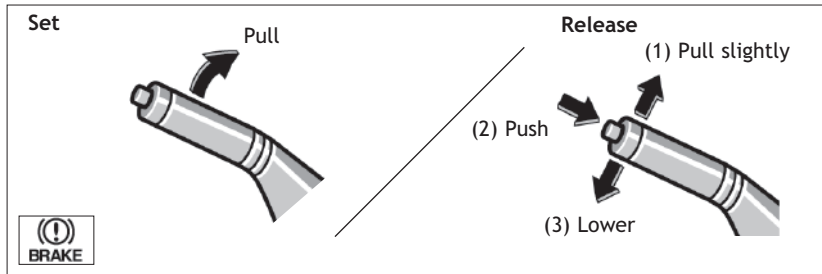


Seat adjustments-Front




- 1 Position
- 2 Cushion angle (driver side only)
- 3 Height crank (driver side only)
- 4 Seatback angle


Seats-Head restraints

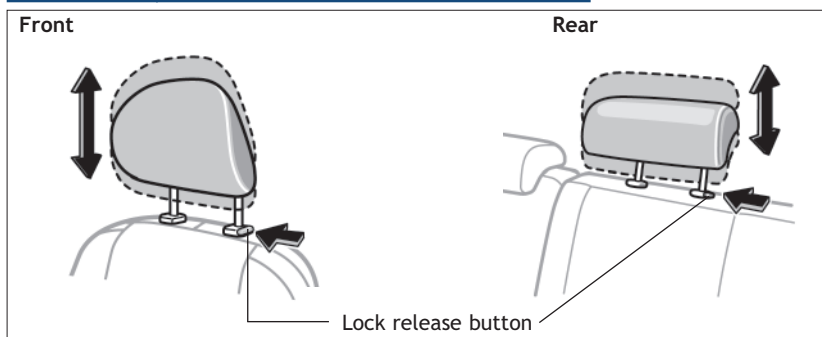

Seats-Folding rear seats

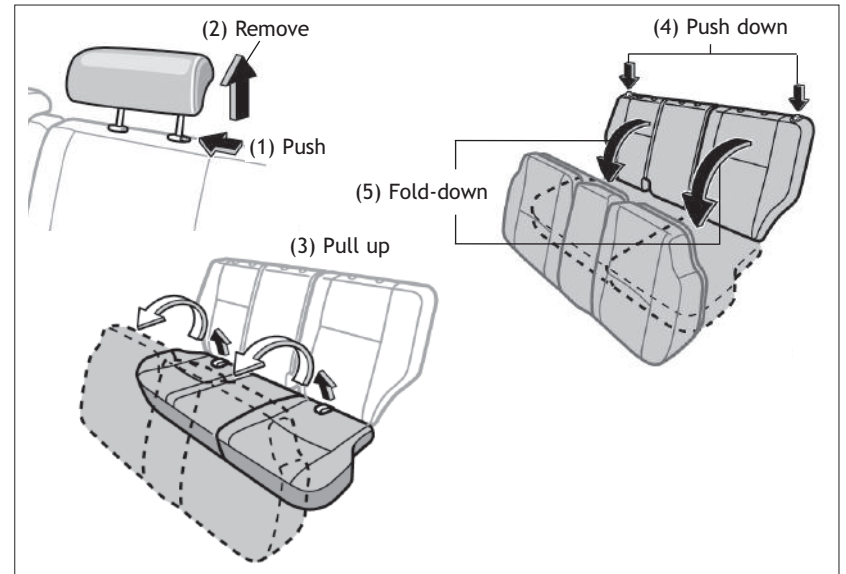


Seats-Removing rear seats

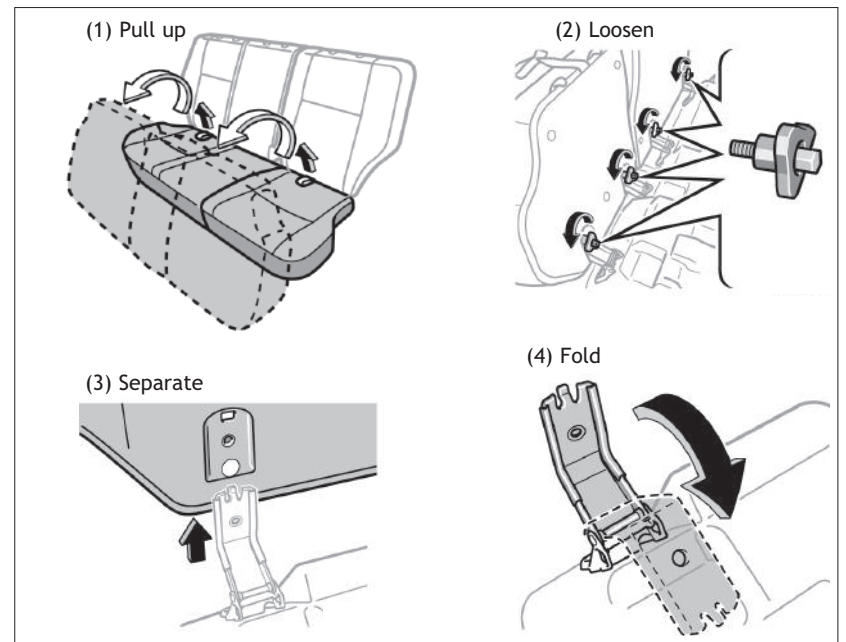


Lights & turn signals

Headlights

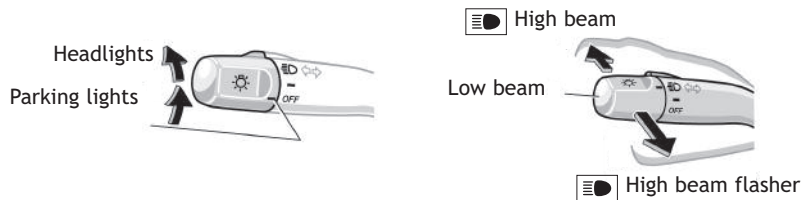


-**Automatic light cutoff system** Automatically turns lights off after 30 seconds when all doors are closed with the key in “ACC” or “LOCK.” Lights may also be turned off by pushing lock button on remote twice.
-**Daytime Running Light system (DRL) (if equipped)** Automatically turns on the headlights at a reduced intensity.

Turn signals

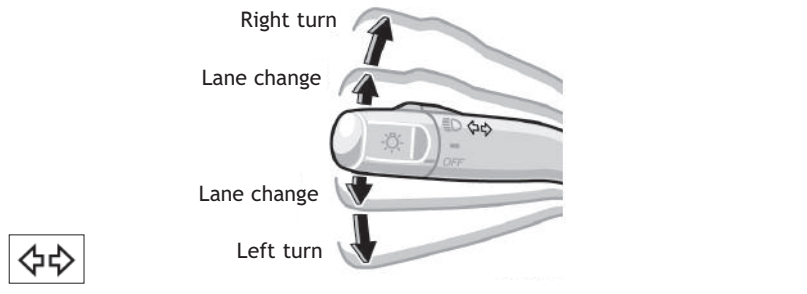

Windshield wipers & washers

Front

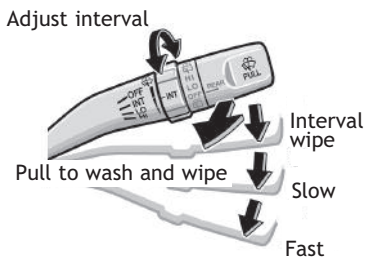

Rear (if equipped)



NOTE: Rear wiper and washer operate only when back window is fully closed.

Windows

Driver side




Automatic down operation (driver side only) Push the switch completely down and release to fully open. To stop window at any point, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver’s window remains operable.

Door-Back

Open/Close

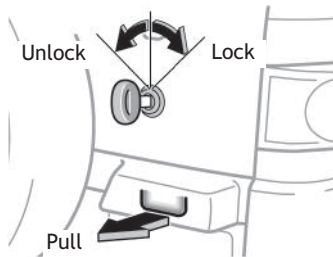


Lock in place

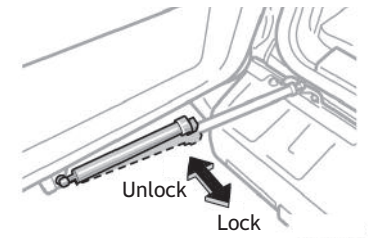

* Back door can be locked into place when it is fully open.


Accessory meter (if equipped)

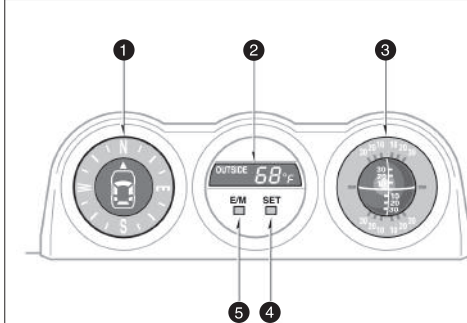


- 1 Compass
- 2 Outside temperature display
- 3 Clinometer-vehicle slant
- 4 Calibrating the compass setting
- 5 Switching between Fahrenheit and Celcius of thermometer

Audio

Type 1

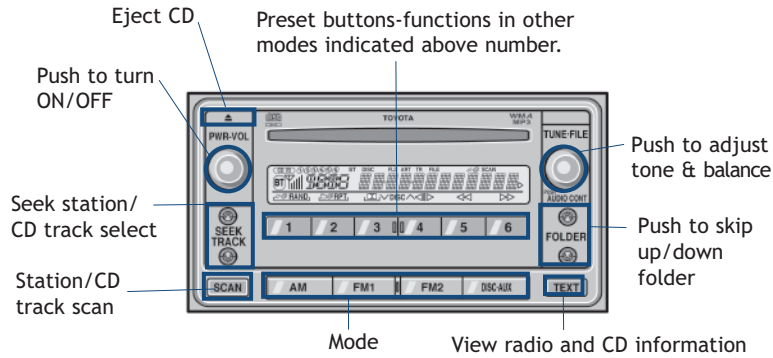

Type 2

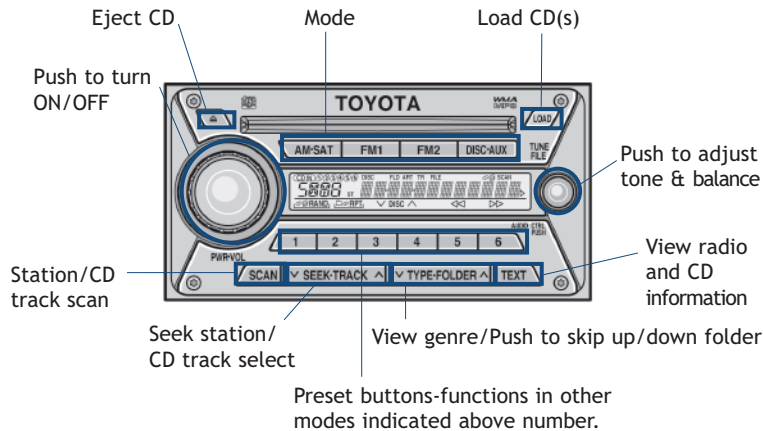

CD PLAYER

To scan tracks on a disc Push “SCAN.” Push again to hold selection.


CD Changer (Type 2)

- To load one disc Push “LOAD” and insert one disc.
- To load multiple discs Push and hold “LOAD” until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.
- To select a file (MP3/WMA only) Turn “TUNE·FILE.”
- To select a folder (MP3/WMA only) Push either side of “FOLDER” or “TYPE/FOLDER.”

RADIO


Preset buttons Tune in the desired station and press a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select. “SCAN” Push and hold “SCAN” to scan preset stations. Push again to hold selection.

Steering wheel switches (if equipped)

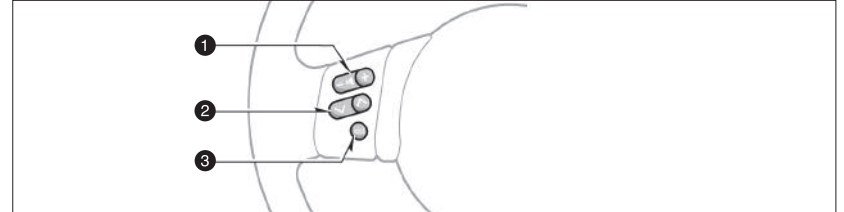


- ① “- +”
Volume control
- ② “∨ ^”
-In radio mode Push to select a preset station; push and hold to seek the next strong station.
-In CD mode Push to skip up or down to the next or previous track.
- ③ “MODE”
Push to turn audio ON and select an audio mode. Push and hold to turn the audio “OFF.”

Subwoofer switch (if equipped)

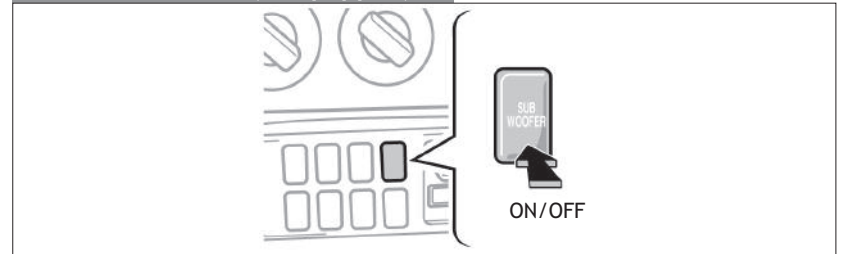

AUX audio jack

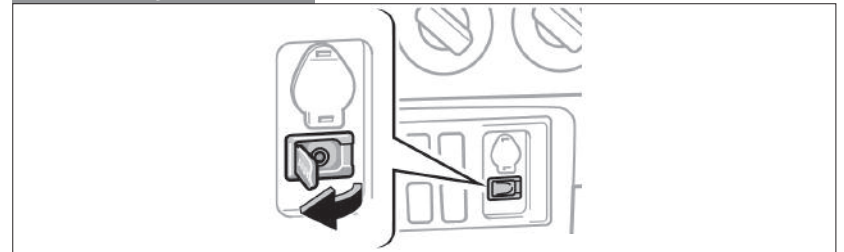

By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle’s speaker system.

Air Conditioning/Heating

1 Fresh or recirculated cabin air
 2 Air Conditioning ON/OFF
 3 Airflow vent selector
 In “” or “” mode, use fresh air (“” indicator OFF) to reduce window fogging.
 4 Temperature
 5 Fan speed
 6 Rear defogger

Clock

H- Hour set
 M- Minute set

Cruise control (if equipped)

Turning system ON/OFF	Functions
<p>CRUISE System ON/OFF</p>	<p>Cancel¹ Resume²/Increase speed Set/Decrease speed</p>

¹ The set speed may also be cancelled by depressing the brake pedal.
² The set speed may be resumed once vehicle speed exceeds 25 mph.

Intuitive parking assist (if equipped)

ON/OFF switch


When vehicle is in reverse, a buzzer will sound to inform driver when nearing an obstacle. The system can only be used when the transmission is in the “R” position.

Light control-Instrument panel

Brightness control

Auto LSD (Limited Slip Differential) (if equipped)

2WD only

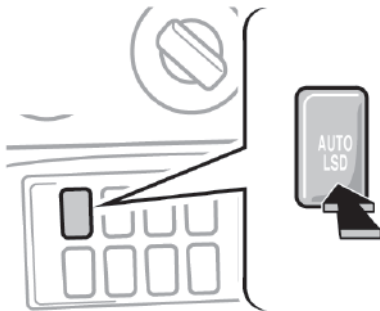

**AUTO
LSD**

Push the “AUTO LSD” switch when the vehicle is **stopped**. To deactivate, push the switch again.


NOTE: This system should **ONLY** be used when wheel spinning occurs on slippery or unpaved surfaces.

Refer to the *Owner’s Manual* for complete details on this system before attempting to use it.

Cup holders


Automatic
Transmission models

Detachable adapter

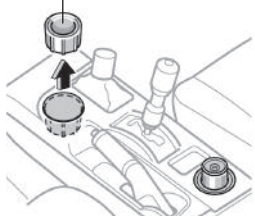


Manual
Transmission models


Detachable adapter

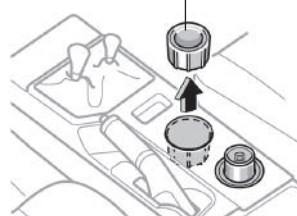

Rear console

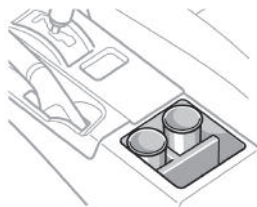


Bottle holders-Rear seat

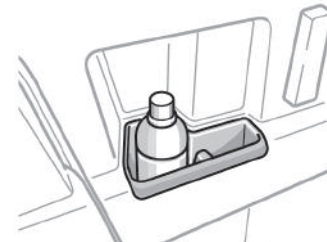

Power outlet-12V DC


Instrument panel

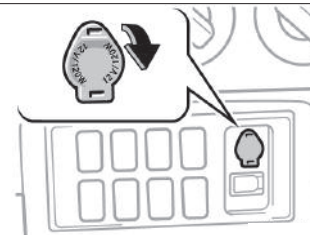

Key must be in the “ACC” or “ON” position to be used.

Power outlet-115V AC (if equipped)

ON/OFF switch

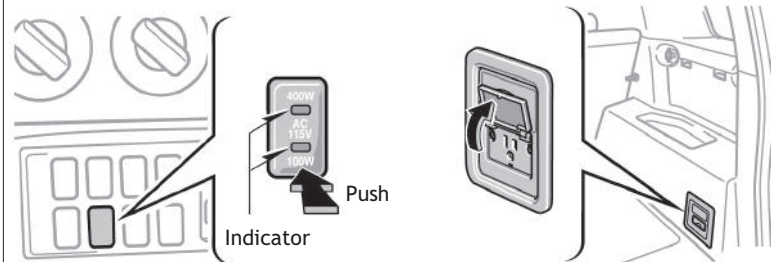


The illumination changes according to the maximum available capacity.

- Green and Yellow 115V AC/400W
- Yellow 115V AC/100W

Engine must be running in order to use the 115V AC power outlet.

SAFETY AND EMERGENCY FEATURES


Seat belts

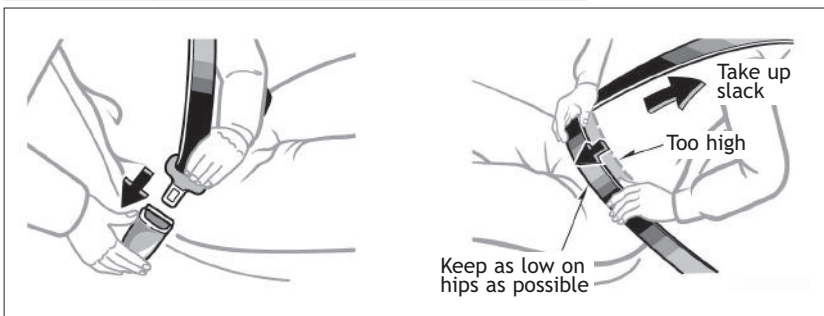


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Seat belts-Shoulder belt anchor

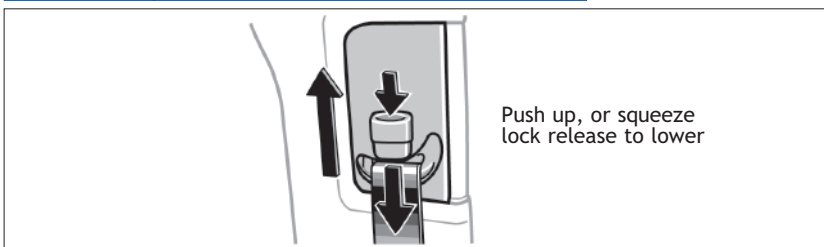

Door locks

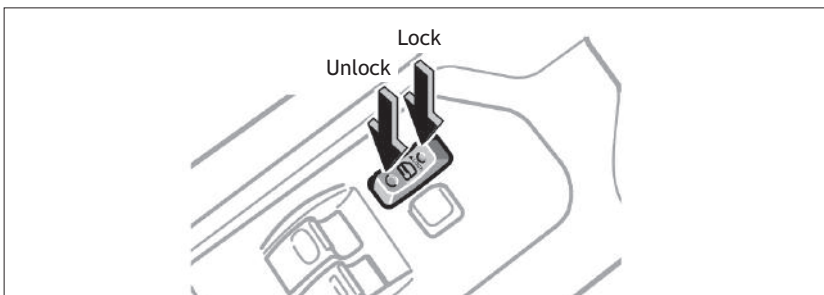


Tire Pressure Warning System

If tire pressure becomes critically low on any of the tires (including the spare), indicator light will come on. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the *Owner's Manual* for more details.

Spare tire & tools

Tool location

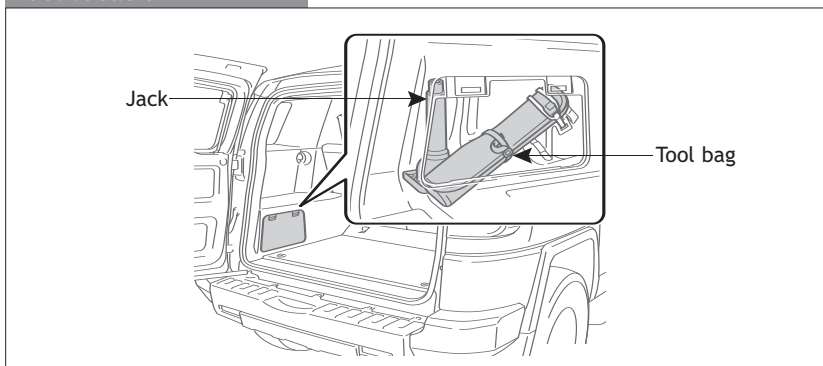

Removing the spare tire

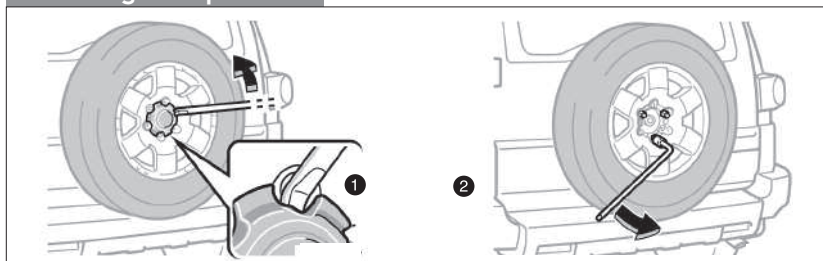

- ① Remove the wheel ornament (aluminum wheel only).
- ② Turn the hold-down nuts counterclockwise and remove.

Refer to the *Owner's Manual* for jack positioning and tire changing procedures.