


Table of Contents

In this manual you will find:

Warranty at a Glance	1
The Toyota Touch	2
How to Get Assistance	3
New Vehicle Limited Warranty	
• What Is Covered	4
• What Is Not Covered	6
• Owner's Responsibilities	7
Federal Emission Warranty	9
California Emission Control Warranty	13
Tire Limited Warranty	17
Arbitration	18
Seat Belt/Audio Systems	21
Extended Protection for Your Vehicle	22
Parts and Service	23
Toyota Parts Centers	24
Toyota Express Lube	25
Lifetime Guarantee Program	26
Genuine Toyota Fluids	27
Dealer Certificate	28
Scheduled Maintenance	29
Maintenance Log	34
Service Manuals	50
Vehicle Identification/ Owner Identification	53

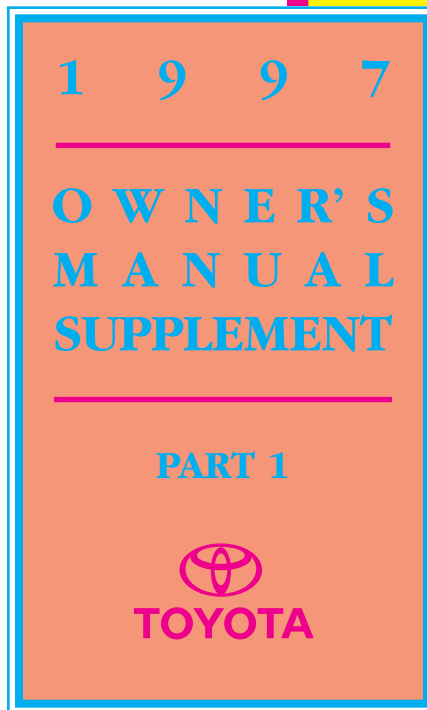

**T100/Tacoma/Previa/RAV4
4Runner/Land Cruiser**

Introduction

The scheduled maintenance information included in this supplement is provided as a guide to assist you in getting the greatest ownership value from your Toyota, while helping to maximize its performance, safety, and reliability. In addition to scheduled maintenance, your Toyota also requires ongoing general maintenance which includes checking fluid levels and simple visual inspections for potential signs of trouble. These items are explained separately in the “General Maintenance” section of your *Owner’s Manual*.

How much scheduled maintenance **your** Toyota requires depends on how you drive, as well as the environmental conditions in which you drive. The demands on vehicles can vary significantly depending on the driver, driving conditions, and geographic location. The following pages will assist you in determining the proper amount of maintenance for your Toyota so that you won’t have to pay for more maintenance than your Toyota needs. **Note:** Failure to properly maintain your vehicle can result in your warranty being voided either in whole or in part; please refer to the “New Vehicle Limited Warranty – Owner’s Responsibilities” section of this supplement for details.

The Scheduled Maintenance Log beginning on page 34 of this supplement allows you to easily identify the maintenance requirements at each mileage (or month) interval, while also providing you with a convenient place to document your vehicle’s maintenance history. Properly maintaining your Toyota and documenting its maintenance history can also help increase its resale value.

How to Follow the Scheduled Maintenance Log

Oil Change Intervals

The Scheduled Maintenance Log has been designed to provide you with the flexibility to follow either 5,000-mile or 7,500-mile oil change intervals depending on your circumstances.

- Use **5,000-mile** oil change intervals to help ensure proper engine lubrication under most driving conditions or if you **primarily** operate your Toyota under the “Special Operating Conditions” described on page 30.

- Use **7,500-mile** oil change intervals if you **primarily** operate your Toyota under light, non-commercial duty for distances greater than five miles in temperate climates (above freezing and below 90° F).

If you choose **5,000-mile** oil change intervals, simply follow the instructions printed in the non-shaded boxes as shown in this example:

5,000 MILES

If you choose **7,500-mile** oil change intervals, simply follow the instructions printed in the shaded boxes as shown in this example:

7,500 MILES

The **5,000-** and **7,500-mile** intervals coincide at 15,000-mile increments; therefore, both the shaded and non-shaded boxes are shown as in this example:

15,000 MILES
15,000 MILES

SCHEDULED MAINTENANCE

30

Additional Maintenance Items for “Special Operating Conditions”

To assist you in getting the greatest ownership value from your Toyota, the Scheduled Maintenance Log separates the basic maintenance item requirements for most vehicles from the additional maintenance item requirements for vehicles that operate under more demanding “Special Operating Conditions.”

For the majority of owners who operate their Toyotas for personal use under normal conditions, the basic maintenance items listed in the upper section of the maintenance box should provide all the maintenance your Toyota needs. If you operate your Toyota **primarily** in any of the more demanding “Special Operating Conditions” listed in the next column, you should have the additional maintenance items indicated in the maintenance box performed on your Toyota. If you only **occasionally** operate your vehicle under these conditions, it is **not** necessary to perform the additional maintenance items.

Note: If you meet the requirements for 7,500-mile oil change intervals as indicated in the previous section, your Toyota should **not** require the additional maintenance items.

Special Operating Conditions:

1. Towing a trailer or using a camper or car-top carrier.
2. Repeated short trips of less than five miles in temperatures below freezing.
3. Extensive idling or low-speed driving for long distances as in heavy commercial use such as delivery, taxi, or patrol car.
4. Operating on rough, muddy, or salt-covered roads.
5. Operating on unpaved or dusty roads.

Note: Whenever you drive off-road through deep sand, mud, or water, check the following items daily and perform maintenance or repair as required: (Land Cruiser, 4Runner, RAV4, Tacoma [4WD], T100 [4WD])

- Brake pads and discs
- Brake linings and drums
- Brake lines and hoses
- Transmission, transfer, and differential oil/fluid
- Wheel bearings
- Steering linkage and boots
- Air cleaner filter
- Grease the propeller shafts daily when you drive off-road through sand, mud, or water (4WD, except RAV4).
- For Land Cruiser, also have the wheel bearings and joints greased by your Toyota dealer.

Explanation of Scheduled Maintenance Items

The following explanations are provided to give you a greater awareness and understanding of the individual maintenance items that should be performed on your Toyota to help ensure long life and top operating condition. The Scheduled Maintenance Log in the next section of this supplement identifies which of these maintenance items should be performed at each mileage/ month interval.

Engine Components and Emission Control Systems

Timing Belt (not applicable to Previa, Land Cruiser, and Truck/4Runner [with 2.7L 4 Cyl.]

If the vehicle is operated under extensive idling or low-speed driving for long distances as in heavy commercial use such as delivery, taxi, or patrol car, replace the timing belt every 60,000 miles. A qualified technician should perform this operation.

Valve Clearance

Inspect for excessive tappet noise and/or engine vibration and adjust if necessary. A qualified technician should perform this operation.

Drive Belts

Inspect the drive belts for cracks, excessive wear, or oiliness. Replace the belts if damaged, and check the belt tension and adjust it if necessary. After inspection at 60,000 miles or 48 months, inspect every 15,000 miles or 12 months.

Engine Oil and Oil Filter

Change the engine oil and oil filter when scheduled. Use API SH, Energy-Conserving II multigrade engine oil, or ILSAC multigrade engine oil. For recommended viscosity, please refer to your *Owner's Manual*.

Engine Coolant

Drain and flush the cooling system when scheduled. Refill only with an ethylene-glycol type coolant. A qualified technician should perform this operation.

Exhaust Pipes and Mountings

Visually inspect the exhaust pipes, muffler, and hangers for cracks, deterioration, or damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

Engine Air Filter

Replace the engine air cleaner filter when scheduled.

Fuel Lines and Connections, Fuel Tank Vapor Vent System Hoses, and Fuel Tank Band

Visually inspect the lines, connections, hoses, and tank band for corrosion, damage, cracks, and loose or leaking connections. Tighten connections or replace parts as necessary.

Fuel Tank Cap Gasket

Visually inspect the fuel tank cap gasket for cracks, deterioration, or damage and replace if necessary.

SCHEDULED MAINTENANCE

32

Spark Plugs

Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

Charcoal Canister

Inspect for internal damage or clogging every 60,000 miles or 72 months. Clean with compressed air or replace if necessary. A qualified technician should perform this operation.

Supercharger Gear Oil

Inspect the supercharger gear oil when scheduled. A qualified technician should perform this operation.

Chassis and Body

Tire Rotation

To equalize tire wear and help extend tire life, Toyota recommends that you rotate your tires every 5,000 to 7,500 miles. However, the most appropriate timing for tire rotation may vary according to your driving habits and road surface conditions.

Brake Linings (shoes and pads), Drums, and Discs

Check the brake linings (shoes) and drums for scoring, burning, leaking fluid, broken parts, and excessive wear. Check the pads

for excessive wear and discs for runout and wear, and leaking fluid. A qualified technician should perform this operation.

Brake Lines and Hoses

Visually check for proper installation. Check for chafing, cracks, deterioration, and any evidence of leaking. Replace any deteriorated or damaged parts immediately. A qualified technician should perform these operations.

Steering Linkage

With the vehicle stopped, check for excessive freeplay in the steering wheel. Check the linkage for bending or damage. Check the dust boots (if so equipped) for deterioration, cracks, or damage. Check the linkage for bending or damage. Replace any damaged parts.

SRS Air Bags

After initial inspection at 120 months from the manufacture date on the certification label, inspect every 24 months. A qualified technician should perform this operation.

Steering Gear Box

Inspect the steering gear box and rack and pinion assemblies (if so equipped) for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

Ball Joints and Dust Covers

Check the suspension and steering linkage ball joints for looseness or damage. Check all dust covers for deterioration or damage. A qualified technician should perform this operation.

Drive Shaft Boots

Check the drive shaft(s) boots and clamps for cracks, deterioration, or damage. Replace any damaged parts and, if necessary, repack the grease. For Previa (except All-trac), 4Runner, RAV4, Tacoma, and T100 (4WD), also re-torque the flange bolts. A qualified technician should perform these operations.

Manual Transmission and Transfer Oil

Inspect each component for signs of leakage when scheduled. If you discover any leakage, have it repaired by a qualified technician immediately. If the vehicle is operated under the "Special Operating Conditions" defined on page 30 of this supplement, change the oil when scheduled.

Automatic Transmission, Transfer, and Differential Oil

For Previa and RAV4, inspect each component for signs of leakage when scheduled. If you discover any leakage, have it repaired by a qualified technician immediately.

For vehicles except Previa and RAV4, inspect each component for correct fluid or oil level, and replenish if necessary.

For all models, if the vehicle is operated under the “Special Operating Conditions” defined on page 30 of this supplement, change the oil when scheduled.

Limited-Slip Differential Oil

Inspect every 15,000 miles or 12 months. Replace every 30,000 miles or 24 months. A qualified technician should perform this operation.

Wheel Bearing and Drive Shaft Bushing Grease

Repack the wheel bearings with wheel bearing grease and front drive shaft bushings with molybdenum-disulfide lithium-base chassis grease.

Steering Knuckle Grease

Repack the steering knuckles with molybdenum-disulfide lithium-base chassis grease. After submerged, be sure to apply grease within 24 hours regardless of the maintenance intervals.

Propeller Shaft(s) Grease

For Land Cruiser, lubricate the propeller shaft(s) spiders and slide yokes with lithium-base wheel bearing grease, and re-torque the flange bolts. Be sure to lubricate within 24 hours after submerged regardless of the maintenance intervals.

For Previa, lubricate the propeller shaft(s) slide yoke with lithium-base wheel bearing grease, and re-torque the flange bolts. Be sure to lubricate within 24 hours after submerged regardless of the maintenance intervals.

For Tacoma, 4Runner, and T100, lubricate the propeller shaft(s) spiders and slide yokes with lithium-base chassis grease and the double cardan joint with molybdenum-disulfide lithium base chassis grease, and re-torque the flange bolts. Be sure to lubricate within 24 hours after submerged regardless of the maintenance intervals.

Bolts and Nuts on Chassis and Body

If the vehicle is operated under the “Special Operating Conditions” defined on page 30 of this supplement, re-tighten the seat mounting bolts and front and rear suspension member retaining bolts to specified torque.

MAINTENANCE LOG

5,000 Miles or 4 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: — Air filter — Drive shaft boots (re-torque flange bolts) — Brake: linings, discs/drums — (RAV4 and all 4WD, except Land Cruiser) — Steering linkages — Body/chassis nuts and bolts — Ball joints and dust covers	
<div style="border: 1px solid black; padding: 5px;">Dealer Service Verification</div>	Date: _____ Mileage: _____

10,000 Miles or 8 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: — Air filter — Drive shaft boots (re-torque flange bolts) — Brake: linings, discs/drums — (RAV4 and all 4WD, except Land Cruiser) — Steering linkages — Body/chassis nuts and bolts — Ball joints and dust covers	
<div style="border: 1px solid black; padding: 5px;">Dealer Service Verification</div>	Date: _____ Mileage: _____

7,500 Miles or 6 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	<div style="border: 1px solid black; padding: 5px;">Dealer Service Verification</div> Date: _____ Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.



15,000 Miles or 12 Months*											
15,000 Miles or 12 Months*											
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">__ Exhaust pipes and mountings</td> <td style="width: 50%;">__ Drive shaft boots (re-torque flange bolts)</td> </tr> <tr> <td>__ Brake: linings, discs/drums, lines, hoses</td> <td>(RAV4 and all 4WD, except Land Cruiser)</td> </tr> <tr> <td>__ Steering linkages</td> <td>__ Limited-slip differential oil (RAV4)</td> </tr> <tr> <td>__ Steering gear box for leakage</td> <td>__ Automatic transmission and differential oil</td> </tr> <tr> <td>__ Ball joints and dust covers</td> <td></td> </tr> </table>		__ Exhaust pipes and mountings	__ Drive shaft boots (re-torque flange bolts)	__ Brake: linings, discs/drums, lines, hoses	(RAV4 and all 4WD, except Land Cruiser)	__ Steering linkages	__ Limited-slip differential oil (RAV4)	__ Steering gear box for leakage	__ Automatic transmission and differential oil	__ Ball joints and dust covers	
__ Exhaust pipes and mountings	__ Drive shaft boots (re-torque flange bolts)										
__ Brake: linings, discs/drums, lines, hoses	(RAV4 and all 4WD, except Land Cruiser)										
__ Steering linkages	__ Limited-slip differential oil (RAV4)										
__ Steering gear box for leakage	__ Automatic transmission and differential oil										
__ Ball joints and dust covers											
<i>Additional Maintenance Items for Special Operating Conditions:</i>											
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.											
<input type="checkbox"/> Inspect air filter <input type="checkbox"/> Replace automatic transmission and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts											
<div style="border: 1px solid black; padding: 5px; min-height: 40px;"> <p style="text-align: center;"><i>Dealer Service Verification</i></p> </div>	Date: _____ Mileage: _____										

MAINTENANCE LOG

36

20,000 Miles or 16 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: — Air filter — Drive shaft boots (re-torque flange bolts) — Brake: linings, discs/drums — (RAV4 and all 4WD, except Land Cruiser) — Steering linkages — Body/chassis nuts and bolts — Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



25,000 Miles or 20 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: — Air filter — Drive shaft boots (re-torque flange bolts) — Brake: linings, discs/drums — (RAV4 and all 4WD, except Land Cruiser) — Steering linkages — Body/chassis nuts and bolts — Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



22,500 Miles or 18 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	Dealer Service Verification Date: _____ Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



30,000 Miles or 24 Months*	
30,000 Miles or 24 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace non-platinum spark plugs (except Previa, RAV4) ¹ <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Repack front wheel bearings (except Previa, RAV4, 4Runner, and 4WD Tacoma with ADD) <input type="checkbox"/> Inspect the following: — Drive belts (non-ribbed) — Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band — Fuel tank cap gasket — Supercharger gear oil (Previa) — Exhaust pipes and mountings — Brake: linings, discs/drums, lines, hoses	<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Lubricate drive shaft bushing (Land Cruiser, 4WD T100, and 4WD Tacoma without ADD) <input type="checkbox"/> Replace limited-slip differential oil (RAV4) — Steering linkages — Steering gear box for leakage — Ball joints and dust covers — Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD, except Land Cruiser) — Transmission, transfer, and differential oil
<p>Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <input type="checkbox"/> Replace transmission, transfer, and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts	
<div style="border: 1px solid black; padding: 5px; min-height: 40px;"> <p style="text-align: center; margin: 0;">Dealer Service Verification</p> </div>	Date: _____ Mileage: _____

¹ Maintenance service is required under the terms of the Emission Control Warranty.

MAINTENANCE LOG

38

35,000 Miles or 28 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions:	
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser)	
<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)	
<input type="checkbox"/> Inspect the following:	
<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	<input type="checkbox"/> (RAV4 and all 4WD, except Land Cruiser)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



40,000 Miles or 32 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions:	
Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser)	
<input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)	
<input type="checkbox"/> Inspect the following:	
<input type="checkbox"/> Air filter	<input type="checkbox"/> Drive shaft boots (re-torque flange bolts)
<input type="checkbox"/> Brake: linings, discs/drums	<input type="checkbox"/> (RAV4 and all 4WD, except Land Cruiser)
<input type="checkbox"/> Steering linkages	<input type="checkbox"/> Body/chassis nuts and bolts
<input type="checkbox"/> Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



37,500 Miles or 30 Months*	
<input type="checkbox"/> Replace engine oil and oil filter	
<input type="checkbox"/> Rotate tires	
Dealer Service Verification	Date: _____
	Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



45,000 Miles or 36 Months*										
45,000 Miles or 36 Months*										
<ul style="list-style-type: none"> <input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%; padding: 2px 10px 2px 20px;">__ Exhaust pipes and mountings</td> <td style="width: 50%; padding: 2px 10px 2px 20px;">__ Drive shaft boots (re-torque flange bolts)</td> </tr> <tr> <td style="padding: 2px 10px 2px 20px;">__ Brake: linings, discs/drums, lines, hoses</td> <td style="padding: 2px 10px 2px 20px;">(RAV4 and all 4WD, except Land Cruiser)</td> </tr> <tr> <td style="padding: 2px 10px 2px 20px;">__ Steering linkages</td> <td style="padding: 2px 10px 2px 20px;">__ Automatic transmission and differential oil</td> </tr> <tr> <td style="padding: 2px 10px 2px 20px;">__ Steering gear box for leakage</td> <td style="padding: 2px 10px 2px 20px;">__ Limited-slip differential oil (RAV4)</td> </tr> <tr> <td style="padding: 2px 10px 2px 20px;">__ Ball joints and dust covers</td> <td></td> </tr> </table> <p><i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <ul style="list-style-type: none"> <input type="checkbox"/> Inspect air filter <input type="checkbox"/> Replace automatic transmission and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts <div style="border: 1px solid black; padding: 10px; margin-top: 10px; display: flex; justify-content: space-between;"> <div style="width: 60%;"><i>Dealer Service Verification</i></div> <div style="width: 35%;">Date: _____</div> </div> <div style="margin-top: 10px;">Mileage: _____</div>	__ Exhaust pipes and mountings	__ Drive shaft boots (re-torque flange bolts)	__ Brake: linings, discs/drums, lines, hoses	(RAV4 and all 4WD, except Land Cruiser)	__ Steering linkages	__ Automatic transmission and differential oil	__ Steering gear box for leakage	__ Limited-slip differential oil (RAV4)	__ Ball joints and dust covers	
__ Exhaust pipes and mountings	__ Drive shaft boots (re-torque flange bolts)									
__ Brake: linings, discs/drums, lines, hoses	(RAV4 and all 4WD, except Land Cruiser)									
__ Steering linkages	__ Automatic transmission and differential oil									
__ Steering gear box for leakage	__ Limited-slip differential oil (RAV4)									
__ Ball joints and dust covers										

MAINTENANCE LOG

40

50,000 Miles or 40 Months*	55,000 Miles or 44 Months*
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items. <input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: — Air filter — Drive shaft boots (re-torque flange bolts) — Brake: linings, discs/drums — (RAV4 and all 4WD, except Land Cruiser) — Steering linkages — Body/chassis nuts and bolts — Ball joints and dust covers <div data-bbox="94 537 490 689" style="border: 1px solid black; padding: 5px;">Dealer Service Verification Date: _____ Mileage: _____</div>	<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items. <input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: — Air filter — Drive shaft boots (re-torque flange bolts) — Brake: linings, discs/drums — (RAV4 and all 4WD, except Land Cruiser) — Steering linkages — Body/chassis nuts and bolts — Ball joints and dust covers <div data-bbox="857 537 1253 689" style="border: 1px solid black; padding: 5px;">Dealer Service Verification Date: _____ Mileage: _____</div>
52,500 Miles or 42 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	<div data-bbox="604 763 1000 917" style="border: 1px solid black; padding: 5px;">Dealer Service Verification Date: _____ Mileage: _____</div>

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



60,000 Miles or 48 Months*	
60,000 Miles or 48 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace spark plugs ¹ <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Repack front wheel bearings (except Previa, RAV4, 4Runner, and 4WD Tacoma with ADD) <input type="checkbox"/> Inspect the following: — Valves (audible inspection), adjust if necessary — Drive belts — Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band — Fuel tank cap gasket — Charcoal canister (72 months) ² — Supercharger gear oil (Previa)	<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Lubricate drive shaft bushing (Land Cruiser, 4WD T100, and 4WD Tacoma without ADD) <input type="checkbox"/> Replace limited-slip differential oil (RAV4) — Exhaust pipes and mountings — Brake: linings, discs/drums, lines, hoses — Steering linkages — Steering gear box for leakage — Ball joints and dust covers — Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD, except Land Cruiser) — Transmission, transfer, and differential oil
<p>Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <input type="checkbox"/> Replace timing belt (except Previa, Land Cruiser, and Truck/4Runner with 2.7L 4 Cyl.) ³ <input type="checkbox"/> Replace transmission, transfer, and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts	
<div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Dealer Service Verification</p> </div>	Date: _____ Mileage: _____

¹ Maintenance service is required under the terms of the Emission Control Warranty.
² Non-maintenance item except for CA, MA, NY.
³ Timing belt replacement only required for Special Operating Condition 3 as indicated on page 30 of this supplement.

MAINTENANCE LOG

42

65,000 Miles or 52 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: — Air filter — Drive shaft boots (re-torque flange bolts) — Brake: linings, discs/drums — (RAV4 and all 4WD, except Land Cruiser) — Steering linkages — Body/chassis nuts and bolts — Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



70,000 Miles or 56 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following: — Air filter — Drive shaft boots (re-torque flange bolts) — Brake: linings, discs/drums — (RAV4 and all 4WD, except Land Cruiser) — Steering linkages — Body/chassis nuts and bolts — Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



67,500 Miles or 54 Months*		
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	Dealer Service Verification	Date: _____
		Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals

75,000 Miles or 60 Months*

75,000 Miles or 60 Months*

- Replace engine oil and oil filter
- Rotate tires
- Lubricate steering knuckle (Land Cruiser)
- Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
- Inspect the following:
 - __ Drive belts
 - __ Exhaust pipes and mountings
 - __ Brake: linings, discs/drums, lines, hoses
 - __ Steering linkages
 - __ Steering gear box for leakage
 - __ Ball joints and dust covers
 - __ Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD, except Land Cruiser)
 - __ Limited-slip differential oil (RAV4)
 - __ Automatic transmission and differential oil

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- Inspect air filter
- Replace automatic transmission and differential oil
- Inspect body/chassis nuts and bolts

Dealer Service Verification

MAINTENANCE LOG

80,000 Miles or 64 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following:	
— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	— (RAV4 and all 4WD, except Land Cruiser)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	
<div style="border: 1px solid black; padding: 5px;">Dealer Service Verification</div>	Date: _____
	Mileage: _____

85,000 Miles or 68 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following:	
— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	— (RAV4 and all 4WD, except Land Cruiser)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	
<div style="border: 1px solid black; padding: 5px;">Dealer Service Verification</div>	Date: _____
	Mileage: _____

82,500 Miles or 66 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
<div style="border: 1px solid black; padding: 5px;">Dealer Service Verification</div>	Date: _____
	Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals



90,000 Miles or 72 Months*	
90,000 Miles or 72 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace non-platinum spark plugs (except Previa, RAV4) ¹ <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Repack front wheel bearings (except Previa, RAV4, 4Runner, and 4WD Tacoma with ADD) <input type="checkbox"/> Inspect the following: — Drive belts — Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band — Fuel tank cap gasket — Supercharger gear oil (Previa) — Exhaust pipes and mountings — Brake: linings, discs/drums, lines, hoses	<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Lubricate drive shaft bushing (Land Cruiser, 4WD T100, and 4WD Tacoma without ADD) <input type="checkbox"/> Replace limited-slip differential oil (RAV4) — Steering linkages — Steering gear box for leakage — Ball joints and dust covers — Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD, except Land Cruiser) — Transmission, transfer, and differential oil
<p><i>Additional Maintenance Items for Special Operating Conditions:</i> Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <input type="checkbox"/> Replace transmission, transfer, and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts	
<div style="border: 1px solid black; padding: 10px; min-height: 40px; width: 100%;"> <p style="text-align: center; margin: 0;"><i>Dealer Service Verification</i></p> </div>	<p>Date: _____</p> <p>Mileage: _____</p>

¹ Maintenance service is required under the terms of the Emission Control Warranty.

MAINTENANCE LOG

46

95,000 Miles or 76 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following:	
— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	— (RAV4 and all 4WD, except Land Cruiser)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



100,000 Miles or 80 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following:	
— Air filter	— Drive shaft boots (re-torque flange bolts)
— Brake: linings, discs/drums	— (RAV4 and all 4WD, except Land Cruiser)
— Steering linkages	— Body/chassis nuts and bolts
— Ball joints and dust covers	
Dealer Service Verification	Date: _____
	Mileage: _____



97,500 Miles or 78 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Dealer Service Verification	Date: _____
	Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals

7,500-Mile Oil Change Intervals

105,000 Miles or 84 Months*

105,000 Miles or 84 Months*

- Replace engine oil and oil filter
- Rotate tires
- Lubricate steering knuckle (Land Cruiser)
- Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4)
- Inspect the following:
 - Drive belts
 - Exhaust pipes and mountings
 - Brake: linings, discs/drums, lines, hoses
 - Steering linkages
 - Steering gear box for leakage
 - Ball joints and dust covers
 - Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD, except Land Cruiser)
 - Limited-slip differential oil (RAV4)
 - Automatic transmission and differential oil

Additional Maintenance Items for Special Operating Conditions:

Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.

- Inspect engine air filter
- Replace automatic transmission and differential oil
- Inspect body/chassis nuts and bolts

Dealer Service Verification

Date: _____

Mileage: _____

MAINTENANCE LOG

48

110,000 Miles or 88 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following:	
— Air filter — Brake: linings, discs/drums — Steering linkages — Ball joints and dust covers	— Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD, except Land Cruiser) — Body/chassis nuts and bolts
Dealer Service Verification	Date: _____ Mileage: _____



115,000 Miles or 92 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.	
<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Inspect the following:	
— Air filter — Brake: linings, discs/drums — Steering linkages — Ball joints and dust covers	— Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD, except Land Cruiser) — Body/chassis nuts and bolts
Dealer Service Verification	Date: _____ Mileage: _____



112,500 Miles or 90 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires	
Dealer Service Verification	Date: _____ Mileage: _____

*Use the white background boxes to follow 5,000-mile oil change intervals or the shaded background boxes to follow 7,500-mile oil change intervals. Please refer to page 29 of this supplement for further information and to determine which interval is right for your driving circumstances.

5,000-Mile Oil Change Intervals


7,500-Mile Oil Change Intervals



120,000 Miles or 96 Months*	
120,000 Miles or 96 Months*	
<input type="checkbox"/> Replace engine oil and oil filter <input type="checkbox"/> Rotate tires <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace spark plugs ¹ <input type="checkbox"/> Replace engine coolant <input type="checkbox"/> Repack front wheel bearings (except Previa, RAV4, 4Runner, and 4WD Tacoma with ADD) <input type="checkbox"/> Inspect the following: ___ Valves (audible inspection, adjust if necessary) ___ Drive belts ___ Fuel lines and connections, fuel tank vapor vent system hoses, fuel tank band ___ Fuel tank cap gasket ___ Charcoal canister (144 months) ² ___ Supercharger gear oil (Previa)	<input type="checkbox"/> Lubricate steering knuckle (Land Cruiser) <input type="checkbox"/> Lubricate propeller shaft (re-torque bolts) (4WD, except RAV4) <input type="checkbox"/> Lubricate drive shaft bushing (Land Cruiser, 4WD T100, and 4WD Tacoma without ADD) <input type="checkbox"/> Replace limited-slip differential oil (RAV4) ___ Exhaust pipes and mountings ___ Brake: linings, discs/drums, lines, hoses ___ Steering linkages ___ Steering gear box for leakage ___ Ball joints and dust covers ___ Drive shaft boots (re-torque flange bolts) (RAV4 and all 4WD, except Land Cruiser) ___ Transmission, transfer, and differential oil
<p>Additional Maintenance Items for Special Operating Conditions: Please refer to page 30 of this supplement to determine if your Toyota requires the additional maintenance items.</p> <input type="checkbox"/> Replace timing belt (except Previa, Land Cruiser, and Truck/4Runner with 2.7L 4 Cyl.) ³ <input type="checkbox"/> Replace transmission, transfer, and differential oil <input type="checkbox"/> Inspect body/chassis nuts and bolts	
<div style="border: 1px solid black; padding: 5px; display: flex; justify-content: space-between;"> <div style="flex: 1;">Dealer Service Verification</div> <div style="flex: 1;">Date: _____</div> </div> <div style="border: 1px solid black; padding: 5px; display: flex; justify-content: space-between; margin-top: 10px;"> <div style="flex: 1;">Mileage: _____</div> </div>	

120 Months	
120 Months	
<input type="checkbox"/> Inspect SRS Air Bag	
<div style="border: 1px solid black; padding: 10px; display: flex; justify-content: space-between;"> <div style="flex: 1; text-align: center;">Dealer Service Verification</div> <div style="flex: 1;">Date: _____</div> </div> <div style="border: 1px solid black; padding: 5px; display: flex; justify-content: space-between; margin-top: 10px;"> <div style="flex: 1;">Mileage: _____</div> </div>	

¹ Maintenance service is required under the terms of the Emission Control Warranty.
² Non-maintenance item except for CA, MA, NY.
³ Timing belt replacement only required for Special Operating Condition 3 as indicated on page 30 of this supplement.

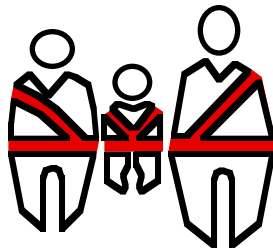

**WE REALLY CARE ABOUT YOU –
PLEASE BUCKLE UP.**

Toyota has made a special effort to encourage use of seat belts.

Toyota belts are:

- Comfortable
- Easy to use
- Convenient

We encourage you to use your belts every time you drive.